


# ALPHABETICAL INDEX

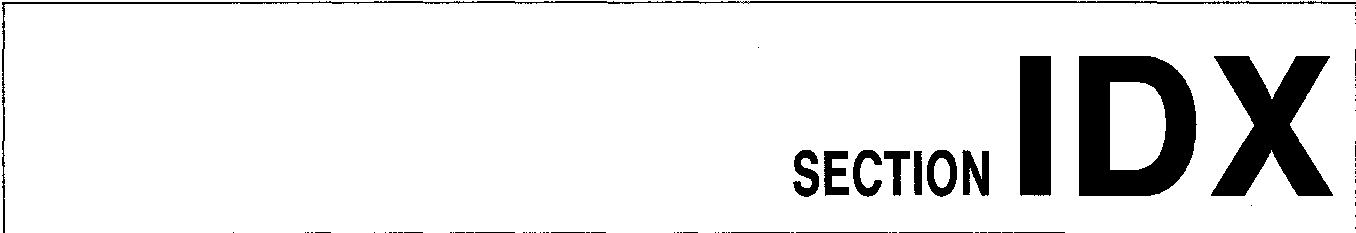

GE  
MA  
EM  
LC  
EF &  
EC  
FE  
CL  
MT  
AT  
TF  
PD  
FA  
RA  
BR  
ST  
BF  
HA  
EL

## ALPHABETICAL INDEX

### A

|  |       |
|--|-------|
| ABS actuator.....  | BR-30 |
| ABS circuit diagram.....                                     | BR-37 |
| ABS component parts and connector locations.....             | BR-36 |
| ABS control unit.....  | BR-30 |
| ABS hydraulic circuit.....                                   | BR-28 |
| ABS self-diagnosis.....                                      | BR-35 |
| ABS symptom chart.....                                       | BR-33 |
| ABS system components.....                                   | BR-28 |
| ABS trouble diagnoses.....                                   | BR-31 |
| ABS wheel sensors.....                                       | BR-30 |
| ABS wiring diagram.....                                      | BR-29 |
| A/C air flow.....  | HA-9  |
| A/C circuit diagram (auto A/C).....                          | HA-63 |
| A/C circuit diagram (manual A/C).....                        | HA-40 |
| A/C component layout.....                                    | HA-8  |
| A/C compressor clutch removal and installation.....          | HA-24 |
| A/C compressor mounting.....                                 | HA-20 |
| A/C compressor precaution.....                               | HA-5  |
| A/C compressor special service tool.....                     | HA-11 |
| A/C control operation (auto A/C).....                        | HA-7  |
| A/C control operation (manual A/C).....                      | HA-7  |
| A/C diagnostic work flow (auto A/C).....                     | HA-27 |
| A/C diagnostic work flow (manual A/C).....                   | HA-27 |
| A/C harness layout (auto A/C).....                           | HA-61 |
| A/C harness layout (manual A/C).....                         | HA-39 |
| A/C HFC134a (R134a) system identification.....               | HA-2  |
| A/C HFC134a (R134a) system introduction.....                 | HA-2  |
| A/C HFC134a (R134a) system precaution.....                   | HA-3  |
| A/C HFC134a (R134a) system service equipment precaution..... | HA-14 |
| A/C HFC134a (R134a) system service procedure.....            | HA-16 |
| A/C HFC134a (R134a) system service tools.....                | HA-12 |
| A/C lubrication oil.....                                     | HA-22 |
| A/C operational check.....                                   | HA-28 |
| A/C performance chart.....                                   | HA-30 |
| A/C performance test diagnoses.....                          | HA-31 |
| A/C push control.....  | HA-95 |
| A/C relay.....   | HA-53 |
| A/C switch (auto A/C).....                                   | HA-93 |
| A/C switch.....  | HA-52 |
| A/C symptom chart (auto A/C).....                            | HA-56 |
| A/C symptom chart (manual A/C).....                          | HA-36 |
| A/C system description (auto A/C).....                       | HA-95 |
| A/C trouble diagnoses (auto A/C).....                        | HA-55 |
| A/C trouble diagnoses (manual A/C).....                      | HA-36 |
| A/C wiring diagram (auto A/C).....                           | HA-64 |
| A/C wiring diagram (manual A/C).....                         | HA-42 |

|   |           |
|---|-----------|
| Acceleration cut control (KA engine).....             | EF&EC-165 |
| Acceleration cut control (VG engine).....             | EF&EC-22  |
| Accelerator control system.....                       | FE-2      |
| Accelerator wire adjustment.....                      | FE-2      |
| Activated carbon canister (KA engine).....            | EF&EC-157 |
| Activated carbon canister inspection (VG engine)..... | EF&EC-141 |
| Air bleeding for brake system.....                    | BR-3      |
| Air cleaner filter replacement (KA24E).....           | MA-17     |
| Air cleaner filter replacement (VG30E).....           | MA-12     |
| Air control cable adjustment.....                     | HA-54     |
| Air mix door control linkage adjustment.....          | HA-94     |
| Alternator.....                                       | EL-19     |
| Ambient sensor.....                                   | HA-100    |
| Angular tightening application.....                   | EM-2      |
| Anti-freeze coolant.....                              | MA-8      |
| ASCD (automatic speed control device).....            | EL-61     |
| AT control unit.....                                  | AT-68     |
| AT fluid temperature sensor.....                      | AT-72     |
| AT indicator lamp.....                                | EL-42     |
| AT removal and installation.....                      | AT-112    |
| AT self-diagnoses.....                                | AT-39     |
| AT trouble diagnoses.....                             | AT-13     |
| Audio.....  | EL-57     |
| Auto lock free running hub.....                       | FA-19     |
| Automatic transmission fluid.....                     | MA-8      |
| Automatic transmission fluid replacement.....         | MA-21     |
| Automatic transmission number.....                    | GI-19     |
| Auxiliary air control (AAC) (VG engine).....          | EF&EC-14  |

### B

|   |       |
|---|-------|
| Back door.....                            | BF-8  |
| Back door window.....                     | BF-48 |
| Back-up lamp.....                         | EL-30 |
| Back-up lamp switch (MT) FS5R30A.....     | MT-33 |
| Back-up lamp switch (MT) FS5W71C.....     | MT-10 |
| Ball joint front axle.....                | FA-45 |
| Battery.....                              | EL-8  |
| Baulk ring (MT) FS5R30A.....              | MT-34 |
| Baulk ring (MT) FS5W71C.....              | MT-11 |
| Belt inspection (drive belt) (KA24E)..... | MA-15 |
| Belt inspection (drive belt) (VG30E)..... | MA-10 |
| Blower motor.....                         | HA-52 |
| Blower relay.....                         | HA-53 |
| Blower resistor.....                      | HA-52 |
| Body alignment.....                       | BF-58 |
| Body mounting.....                        | BF-56 |

## ALPHABETICAL INDEX

|  |       |
|--|-------|
| Brake booster.....                     | BR-10 |
| Brake fluid .....                      | MA-8  |
| Brake fluid change.....                | BR-3  |
| Brake fluid level .....                | MA-23 |
| Brake fluid level and line check ..... | BR-3  |
| Brake hydraulic line .....             | BR-4  |
| Brake inspection.....                  | MA-23 |
| Brake lines and cables inspection..... | MA-23 |
| Brake master cylinder .....            | BR-8  |
| Brake pedal.....                       | BR-6  |

C

|  |           |
|--|-----------|
| Cab body.....  | BF-55     |
| Camshaft inspection (KA engine).....                     | EM-64     |
| Camshaft inspection (VG engine).....                     | EM-24     |
| Camshaft position sensor (CMPS)<br>(KA engine).....      | EF&EC-152 |
| Camshaft position sensor (CMPS)<br>(VG engine).....      | EF&EC-11  |
| Camshaft position sensor inspection<br>(KA engine).....  | EF&EC-280 |
| Camshaft position sensor inspection<br>(VG engine).....  | EF&EC-133 |
| Cargo space .....  | GI-20     |
| Center bearing assembly<br>(propeller shaft).....        | PD-12     |
| Center bearing disassembly<br>(propeller shaft).....     | PD-11     |
| Charging system.....                                     | EL-18     |
| Check connector for ECCS checker<br>box (KA engine)..... | EF&EC-157 |
| Check connector for ECCS checker<br>box (VG engine)..... | EF&EC-16  |
| Cigarette lighter.....                                   | EL-52     |
| Clearance lamp.....                                      | EL-28     |
| Clock.....   | EL-52     |
| Clutch cover.....  | CL-13     |
| Clutch damper .....                                      | CL-9      |
| Clutch disc.....   | CL-12     |
| Clutch fluid.....  | MA-8      |
| Clutch fluid level.....                                  | MA-20     |
| Clutch master cylinder.....                              | CL-7      |
| Clutch operating cylinder.....                           | CL-8      |
| Clutch pedal.....  | CL-4      |
| Clutch pedal free play.....                              | CL-5      |
| Clutch pedal height.....                                 | CL-5      |
| Clutch release bearing.....                              | CL-10     |
| Clutch withdrawal lever .....                            | CL-10     |
| Coil spring (rear).....                                  | RA-18     |
| Combination meter .....                                  | EL-38     |
| Combination switch .....                                 | EL-21     |
| Compression pressure (KA engine).....                    | EM-53     |
| Compression pressure (VG engine).....                    | EM-8      |
| Compressor clutch removal and<br>installation .....      | HA-24     |
| Compressor mounting .....                                | HA-20     |

|  |           |
|--|-----------|
| Compressor precaution.....                             | HA-5      |
| Compressor special service tool .....                  | HA-11     |
| Connecting rod (KA engine) .....                       | EM-77     |
| Connecting rod (VG engine) .....                       | EM-38     |
| Connecting rod bearing clearance<br>(KA engine) .....  | EM-80     |
| Connecting rod bearing clearance<br>(VG engine) .....  | EM-42     |
| Connecting rod bushing clearance<br>(KA engine) .....  | EM-81     |
| Connecting rod bushing clearance<br>(VG engine) .....  | EM-43     |
| Control lever (MT) FS5R30A.....                        | MT-36     |
| Control lever (MT) FS5W71C.....                        | MT-13     |
| Control lever Transfer .....                           | TF-8      |
| Control valve (AT) RE4R01A .....                       | AT-140    |
| Control valve (AT) RL4R01A .....                       | AT-146    |
| Converter housing installation.....                    | AT-113    |
| Coolant.....   | MA-8      |
| Coolant replacement (KA24E).....                       | MA-15     |
| Coolant replacement (VG30E).....                       | MA-11     |
| Cooling circuit (KA engine).....                       | LC-13     |
| Cooling circuit (VG engine) .....                      | LC-6      |
| Cooling fan (KA engine).....                           | LC-16     |
| Cooling fan (VG engine) .....                          | LC-9      |
| Counter gear (MT) FS5R30A .....                        | MT-34     |
| Counter gear (MT) FS5W71C.....                         | MT-11     |
| Counter gear Transfer.....                             | TF-10     |
| Coupling sleeve (MT) FS5R30A .....                     | MT-34     |
| Coupling sleeve (MT) FS5W71C.....                      | MT-11     |
| Crankcase emission control system<br>(KA engine) ..... | EF&EC-291 |
| Crankshaft assembly (KA engine).....                   | EM-82     |
| Crankshaft assembly (VG engine).....                   | EM-44     |
| Crankshaft bearing clearance (KA<br>engine).....       | EM-79     |
| Crankshaft bearing clearance (VG<br>engine).....       | EM-41     |
| Crankshaft inspection (KA engine).....                 | EM-79     |
| Crankshaft inspection (VG engine).....                 | EM-40     |
| Cylinder block (KA engine).....                        | EM-75     |
| Cylinder block (VG engine).....                        | EM-36     |
| Cylinder block boring (KA engine).....                 | EM-78     |
| Cylinder block boring (VG engine).....                 | EM-40     |
| Cylinder head (KA engine).....                         | EM-61     |
| Cylinder head (VG engine) .....                        | EM-20     |
| Cylinder head bolt tightening<br>(KA engine) .....     | EM-71     |
| Cylinder head bolt tightening<br>(VG engine) .....     | EM-31     |

D

|  |       |
|--|-------|
| Daytime light system.....                      | EL-23 |
| Defroster door control rod<br>adjustment ..... | HA-53 |

## ALPHABETICAL INDEX

|   |       |
|---|-------|
| Differential carrier assembly<br>(H190A) .....    | PD-68 |
| Differential carrier assembly<br>(H233B) .....    | PD-91 |
| Differential carrier assembly<br>(R180A) .....    | PD-31 |
| Differential carrier assembly<br>(R200A) .....    | PD-50 |
| Differential carrier disassembly<br>(H190A) ..... | PD-57 |
| Differential carrier disassembly<br>(H233B) ..... | PD-75 |
| Differential gear oil .....                       | MA-8  |
| Differential gear oil replacement .....           | MA-22 |
| Dimensions .....                                  | GI-20 |
| Door adjustment (front) .....                     | BF-12 |
| Door adjustment (rear) .....                      | BF-13 |
| Door mirror .....                                 | BF-52 |
| Drive plate runout (KA engine) .....              | EM-81 |
| Drive plate runout (VG engine) .....              | EM-43 |
| Drive shaft (front) .....                         | FA-29 |
| Dropping resistor (AT) .....                      | AT-72 |
| Dual pressure switch .....                        | HA-52 |

E

|   |              |
|---|--------------|
| ECCS basic inspection (VG engine) ....                              | EF&EC-48     |
| ECCS basic inspection(KA engine)....                                | EF&EC-195    |
| ECCS circuit diagram (KA engine) ....                               | EF&EC-149    |
| ECCS circuit diagram (VG engine) .....                              | EF&EC-10     |
| ECCS component parts location<br>(KA engine) .....                  | EF&EC-145    |
| ECCS component parts location<br>(VG engine) .....                  | EF&EC-4      |
| ECCS on-board diagnostic system<br>(KA engine) .....                | EF&EC-177    |
| ECCS on-board diagnostic system<br>(VG engine) .....                | EF&EC-34     |
| ECCS relay inspection (VG engine)...                                | EF&EC-138    |
| ECCS system diagram and chart<br>(KA engine) .....                  | EF&EC-147    |
| ECCS system diagram and chart<br>(VG engine) .....                  | EF&EC-6      |
| ECCS trouble diagnoses<br>(KA engine) .....                         | EF&EC-171    |
| ECCS trouble diagnoses<br>(VG engine) .....                         | EF&EC-29     |
| ECCS wiring diagram .....   | Foldout page |
| ECM input/output signal inspection<br>(VG engine) .....             | EF&EC-127    |
| EGR canister control solenoid valve<br>inspection (KA engine) ..... | EF&EC-282    |
| EGR canister control solenoid valve<br>inspection (VG engine) ..... | EF&EC-134    |
| EGR control (EGRC) - BPT valve<br>(KA engine) .....                 | EF&EC-156    |

|   |           |
|---|-----------|
| EGR control (EGRC) - BPT valve<br>(VG engine) .....               | EF&EC-15  |
| EGR control (EGRC) - solenoid valve<br>(KA engine) .....          | EF&EC-156 |
| EGR control (EGRC) - solenoid valve<br>(VG engine) .....          | EF&EC-16  |
| EGR temperature sensor<br>(KA engine) .....                       | EF&EC-157 |
| EGR temperature sensor<br>(VG engine) .....                       | EF&EC-16  |
| EGR temperature sensor inspection<br>(KA engine) .....            | EF&EC-282 |
| EGR temperature sensor inspection<br>(VG engine) .....            | EF&EC-135 |
| EGR valve inspection (KA engine) ....                             | EF&EC-281 |
| EGR valve inspection (VG engine) ....                             | EF&EC-135 |
| EGRC - BPT valve inspection<br>(KA engine) .....                  | EF&EC-281 |
| EGRC - BPT valve inspection<br>(VG engine) .....                  | EF&EC-135 |
| Electrical units location .....                                   | EL-75     |
| Engine control module (ECM)<br>(KA engine) .....                  | EF&EC-152 |
| Engine control module (ECM)<br>(VG engine) .....                  | EF&EC-11  |
| Engine coolant temperature sensor<br>(ECTS) (KA engine) .....     | EF&EC-153 |
| Engine coolant temperature sensor<br>(ECTS) (VG engine) .....     | EF&EC-12  |
| Engine coolant temperature sensor<br>inspection (KA engine) ..... | EF&EC-280 |
| Engine coolant temperature sensor<br>inspection (VG engine) ..... | EF&EC-133 |
| Engine oil .....  | MA-8      |
| Engine oil filter replacement<br>(KA24E) .....                    | MA-18     |
| Engine oil filter replacement<br>(VG30E) .....                    | MA-13     |
| Engine oil precautions .....                                      | GI-4      |
| Engine oil replacement (KA24E) .....                              | MA-17     |
| Engine oil replacement (VG30E) .....                              | MA-13     |
| Engine outer component parts<br>(KA engine) .....                 | EM-52     |
| Engine outer component parts<br>(VG engine) .....                 | EM-6      |
| Engine removal (KA engine) .....                                  | EM-73     |
| Engine removal (VG engine) .....                                  | EM-34     |
| Engine serial number .....  | GI-18     |
| Evaporative emission system<br>(KA engine) .....                  | EF&EC-289 |
| Exhaust gas recirculation (EGR)<br>system (KA engine) .....       | EF&EC-163 |
| Exhaust gas recirculation (EGR)<br>system (VG engine) .....       | EF&EC-21  |
| Exhaust gas recirculation (EGR)<br>valve (KA engine) .....        | EF&EC-156 |
| Exhaust gas recirculation (EGR)<br>valve (VG engine) .....        | EF&EC-15  |

# ALPHABETICAL INDEX

Exhaust system..... FE-5  
 Exhaust system inspection ..... MA-20  
 Exterior..... BF-35  
 Exterior lamp ..... EL-28

## F

Fan switch (auto A/C) ..... HA-93  
 Fan switch ..... HA-52  
 Fast idle cam (FIC) inspection and  
 adjustment (KA engine)..... EF&EC-287  
 Final drive disassembly (H190A)..... PD-57  
 Final drive disassembly (H233B)..... PD-75  
 Final drive pre-inspection (H190A)..... PD-57  
 Final drive pre-inspection (H233B)..... PD-75  
 Fluid temperature sensor (AT) ..... AT-72  
 Fluids ..... MA-8  
 Flywheel runout (KA engine) ..... EM-81  
 Flywheel runout (VG engine) ..... EM-43  
 Fork rod (MT) FS5R30A ..... MT-36  
 Fork rod (MT) FS5W71C ..... MT-13  
 Forward clutch RE4R01A and  
 RL4R01A ..... AT-173  
 Front axle ..... FA-15  
 Front bumper ..... BF-6  
 Front disc brake ..... BR-14  
 Front drive shaft Transfer ..... TF-10  
 Front final drive disassembly (4WD)  
 (R180A) ..... PD-19  
 Front final drive disassembly (4WD)  
 (R200A) ..... PD-37  
 Front final drive pre-inspection (4WD)  
 (R180A) ..... PD-19  
 Front final drive pre-inspection (4WD)  
 (R200A) ..... PD-37  
 Front final drive removal and instal-  
 lation (4WD) ..... PD-16  
 Front suspension ..... FA-36  
 Fuel check valve inspection  
 (KA engine) ..... EF&EC-290  
 Fuel check valve inspection  
 (VG engine) ..... EF&EC-142  
 Fuel filler lid ..... BF-8  
 Fuel filter (KA engine) ..... EF&EC-157  
 Fuel filter (VG engine) ..... EF&EC-16  
 Fuel filter replacement (KA24E) ..... MA-16  
 Fuel filter replacement (VG30E) ..... MA-12  
 Fuel gauge ..... EL-40  
 Fuel injector (KA engine) ..... EF&EC-153  
 Fuel injector (VG engine) ..... EF&EC-13  
 Fuel line inspection (KA24E) ..... MA-16  
 Fuel line inspection (VG30E) ..... MA-12  
 Fuel precautions ..... GI-5  
 Fuel pressure check (KA engine) ..... EF&EC-286  
 Fuel pressure check (VG engine) ..... EF&EC-139  
 Fuel pressure regulator  
 (KA engine) ..... EF&EC-154

Fuel pressure regulator (VG engine) .. EF&EC-13  
 Fuel pressure release (KA engine) ... EF&EC-286  
 Fuel pressure release (VG engine) ... EF&EC-139  
 Fuel pump (KA engine) ..... EF&EC-154  
 Fuel pump (VG engine) ..... EF&EC-13  
 Fuel pump control (KA engine)..... EF&EC-162  
 Fuel pump control (VG engine) ..... EF&EC-21  
 Fuel pump relay inspection  
 (VG engine) ..... EF&EC-138  
 Fuel system..... FE-3  
 Fuel tank vacuum relief valve  
 inspection (KA engine) ..... EF&EC-290  
 Fuse ..... EL-6  
 Fusible link..... EL-6

GI  
 MA  
 EM  
 LC

## G

Gears (MT) FS5R30A ..... MT-34  
 Gears (MT) FS5W71C ..... MT-11  
 Governor valve assembly RL4R01A ..... AT-165  
 Grease ..... MA-8

EF &  
 EC  
 FE  
 CL

## H

Harness connector ..... EL-3  
 Harness layout ..... EL-79  
 Hazard warning lamp ..... EL-31  
 Headlamp (For Canada) ..... EL-23  
 Headlamp  
 (For U.S.A.) ..... EL-25  
 Heated oxygen sensor (H02S)  
 (VG engine) ..... EF&EC-13  
 Heated oxygen sensor heater  
 inspection (VG engine) ..... EF&EC-135  
 Heated oxygen sensor monitor  
 (KA engine) ..... EF&EC-180  
 Heated oxygen sensor monitor  
 (VG engine) ..... EF&EC-36  
 Heated seat ..... BF-44  
 Heater wiring diagram ..... HA-41  
 Height (Dimensions) ..... GI-20  
 HFC134a (R134a) system  
 identification ..... HA-2  
 HFC134a (R134a) system  
 introduction ..... HA-2  
 HFC134a (R134a) system precaution ..... HA-3  
 HFC134a (R134a) system service  
 procedure ..... HA-16  
 HFC134a (R134a) system service  
 tools ..... HA-12  
 HFC134a system service equipment  
 precaution ..... HA-14  
 High clutch RE4R01A and RL4R01A ..... AT-171  
 Hood adjustment ..... BF-6  
 Horn ..... EL-52

MT  
 AT  
 TF  
 PD  
 FA  
 RA  
 BR  
 ST  
 BF  
 HA  
 EL

## ALPHABETICAL INDEX

|   |       |
|---|-------|
| How to follow flow chart in trouble diagnoses.....  | GI-11 |
| How to read wiring diagrams.....                    | GI-8  |
| How to use this manual.....                         | GI-6  |
| Hydraulic lash adjuster inspection (KA engine)..... | EM-72 |
| Hydraulic lash adjuster inspection (VG engine)..... | EM-29 |

### I

|  |           |
|--|-----------|
| IACV - air regulator inspection (VG engine).....               | EF&EC-137 |
| IACV - FICD solenoid valve inspection (KA engine).....         | EF&EC-284 |
| IACV-AAC valve inspection (KA engine).....                     | EF&EC-283 |
| IACV-AAC valve inspection (VG engine).....                     | EF&EC-136 |
| Identification plate.....                                      | GI-18     |
| Idle air adjusting (IAA) unit (VG engine).....                 | EF&EC-14  |
| Idle air control (IAC) system (KA engine).....                 | EF&EC-161 |
| Idle air control (IAC) system (VG engine).....                 | EF&EC-20  |
| Idle air control valve (IACV) (KA engine).....                 | EF&EC-155 |
| Idle air control valve (IACV) (VG engine).....                 | EF&EC-14  |
| Idle air control valve (IACV) - air regulator (VG engine)..... | EF&EC-14  |
| Idle mixture ratio inspection (KA engine).....                 | EF&EC-166 |
| Idle mixture ratio inspection (VG engine).....                 | EF&EC-24  |
| Idle speed inspection (KA engine).....                         | EF&EC-166 |
| Idle speed inspection (VG engine).....                         | EF&EC-24  |
| Ignition coil inspection (KA engine) ..                        | EF&EC-281 |
| Ignition coil inspection (VG engine) ..                        | EF&EC-134 |
| Ignition timing inspection (KA engine).....                    | EF&EC-166 |
| Ignition timing inspection (VG engine).....                    | EF&EC-24  |
| Illumination.....  | EL-34     |
| In vehicle sensor.....   | HA-99     |
| Inhibitor switch.....  | AT-71     |
| Inhibitor switch.....  | AT-93     |
| Inhibitor switch inspection (KA engine).....                   | EF&EC-285 |
| Inhibitor switch inspection (VG engine).....                   | EF&EC-138 |
| Injection removal and installation (KA engine).....            | EF&EC-287 |
| Injection removal and installation (VG engine).....            | EF&EC-139 |
| Injector inspection (KA engine).....                           | EF&EC-283 |

|  |           |
|--|-----------|
| injector inspection (VG engine).....                     | EF&EC-137 |
| Instrument panel.....                                    | BF-27     |
| Intake door control linkage adjustment (auto A/C).....   | HA-94     |
| Intake door control linkage adjustment (manual A/C)..... | HA-54     |
| Interior.....  | BF-29     |
| Interior lamp.....                                       | EL-36     |

### J

|  |       |
|--|-------|
| Jacking points.....                                | GI-22 |
| Journal bearing assembly (propeller shaft).....    | PD-13 |
| Journal bearing disassembly (propeller shaft)..... | PD-12 |
| Jump seat.....                                     | BF-42 |

### K

|  |           |
|--|-----------|
| Knock sensor (KS) (VG engine).....       | EF&EC-15  |
| Knock sensor inspection (VG engine)..... | EF&EC-137 |
| Knuckle spindle.....                     | FA-26     |

### L

|  |        |
|--|--------|
| Leaf spring (rear).....                        | RA-14  |
| Length (Dimensions).....                       | GI-20  |
| Lifting points.....                            | GI-23  |
| Limited slip diff. adjustment (H233B).....     | PD-82  |
| Limited slip diff. assembly (H233B).....       | PD-83  |
| Limited slip diff. disassembly (H233B).....    | PD-80  |
| Limited slip diff. inspection (H233B).....     | PD-81  |
| Line pressure solenoid valve.....              | AT-72  |
| Line pressure test (AT) RE4R01A.....           | AT-75  |
| Line pressure test (AT) RL4R01A.....           | AT-89  |
| Liquid gasket application.....                 | EM-2   |
| Low and reverse brake RE4R01A and RL4R01A..... | AT-177 |
| LSV (Load sensing valve).....                  | BR-12  |
| Lubricants.....                                | MA-8   |
| Lubrication circuit (KA engine).....           | LC-10  |
| Lubrication circuit (VG engine).....           | LC-3   |
| Lubrication oil A/C.....                       | HA-22  |

### M

|                                   |       |
|-----------------------------------|-------|
| Magnet clutch.....                | HA-24 |
| Main drive gear (MT) FS5R30A..... | MT-34 |
| Main drive gear (MT) FS5W71C..... | MT-11 |
| Main gear Transfer.....           | TF-10 |

# ALPHABETICAL INDEX

|  |           |
|--|-----------|
| Mainshaft (MT) FS5R30A .....                                     | MT-34     |
| Mainshaft (MT) FS5W71C .....                                     | MT-11     |
| Mainshaft Transfer .....   | TF-10     |
| Maintenance .....  | MA-1      |
| Maintenance general .....  | MA-3      |
| Maintenance periodic.....  | MA-5      |
| Maintenance schedule (1).....                                    | MA-6      |
| Maintenance schedule (2).....                                    | MA-7      |
| Manual lock free running hub .....                               | FA-18     |
| Manual steering gear .....                                       | ST-11     |
| Manual steering gear oil .....                                   | MA-8      |
| Manual transmission number.....                                  | GI-18     |
| Manual transmission oil .....                                    | MA-8      |
| Manual transmission oil<br>replacement .....                     | MA-20     |
| Mass air flow sensor (MAFS)<br>(KA engine) .....                 | EF&EC-152 |
| Mass air flow sensor (MAFS)<br>(VG engine) .....                 | EF&EC-11  |
| Mass air flow sensor inspection<br>(KA engine) .....             | EF&EC-280 |
| Mass air flow sensor inspection<br>(VG engine) .....             | EF&EC-133 |
| Master cylinder (brake) .....                                    | BR-8      |
| Master cylinder (clutch) .....                                   | CL-7      |
| Meter and gauges.....  | EL-38     |
| Mode door control linkage<br>adjustment .....                    | HA-93     |
| Model variation .....  | GI-14     |
| Molding .....  | BF-35     |
| MT overhaul FS5R30A .....  | MT-33     |
| MT overhaul FS5W71C .....  | MT-10     |
| MT removal and installation .....                                | MT-7      |
| Multi purpose grease.....  | MA-8      |
| Multipoint fuel injection (MFI) system<br>(KA engine) .....      | EF&EC-158 |
| Multipoint fuel injection (MFI) system<br>(VG engine) .....      | EF&EC-17  |
| Multipoint fuel injection precautions .....                      | GI-3      |
| Multipoint fuel injection system<br>inspection (KA engine) ..... | EF&EC-286 |

## N

|   |           |
|---|-----------|
| Neutral position switch (MT)<br>FS5R30A .....           | MT-33     |
| Neutral position switch inspection<br>(KA engine) ..... | EF&EC-284 |
| Neutral position switch inspection<br>(VG engine) ..... | EF&EC-138 |

## O

|                               |       |
|-------------------------------|-------|
| Oil pan (KA engine).....      | EM-54 |
| Oil pan (VG engine).....      | EM-9  |
| Oil pressure (KA engine)..... | LC-11 |

|   |           |
|---|-----------|
| Oil pressure (VG engine).....                         | LC-3      |
| Oil pressure relief valve<br>(KA engine) .....        | LC-12     |
| Oil pressure relief valve<br>(VG engine) .....        | LC-5      |
| Oil pump (AT) RE4R01A and<br>RL4R01A .....            | AT-136    |
| Oil pump (KA engine).....                             | LC-11     |
| Oil pump (VG engine) .....                            | LC-4      |
| Oil pump regulator valve<br>(KA engine) .....         | LC-12     |
| Oil pump regulator valve<br>(VG engine).....          | LC-5      |
| Oil seal replacement (front final drive<br>4WD) ..... | PD-14     |
| Oil seal replacement<br>(front of final drive).....   | PD-14     |
| Oil seal replacement (KA engine) .....                | EM-59     |
| Oil seal replacement (VG engine) .....                | EM-18     |
| Operating cylinder (clutch) .....                     | CL-8      |
| Overrun clutch RE4R01A and<br>RL4R01A .....           | AT-173    |
| Overrun clutch solenoid valve.....                    | AT-72     |
| Oversize piston (KA engine).....                      | EM-78     |
| Oversize piston (VG engine).....                      | EM-40     |
| Oxygen sensor (02S) (KA engine) ....                  | EF&EC-154 |

## P

|  |           |
|--|-----------|
| PAIR valve filter replacement<br>(KA24E).....                        | MA-19     |
| Park/Neutral position (PNP) relay<br>inspection (KA engine) .....    | EF&EC-285 |
| Park/Neutral position (PNP) relay<br>inspection (VG engine) .....    | EF&EC-138 |
| Parking brake control .....  | BR-26     |
| Parking drum brake .....   | BR-24     |
| PCV (positive crankcase ventilation)<br>inspection (KA engine) ..... | EF&EC-291 |
| PCV (positive crankcase ventilation)<br>inspection (VG engine) ..... | EF&EC-143 |
| PCV filter replacement (KA24E).....                                  | MA-19     |
| Pilot bushing replacement<br>(VG engine) .....                       | EM-45     |
| Pinion bearing preload diff. (H233B).....                            | PD-86     |
| Pinion bearing preload diff. (R180A).....                            | PD-26     |
| Pinion bearing preload diff. (R200A).....                            | PD-44     |
| Pinion gear height diff. (H190A) .....                               | PD-63     |
| Pinion gear height diff. (H233B) .....                               | PD-86     |
| Pinion gear height diff. (R180A) .....                               | PD-26     |
| Pinion gear height diff. (R200A) .....                               | PD-44     |
| Piston assembly (KA engine).....                                     | EM-82     |
| Piston assembly (VG engine).....                                     | EM-43     |
| Piston pin inspection (KA engine) .....                              | EM-76     |
| Piston pin inspection (VG engine) .....                              | EM-37     |
| Piston ring inspection (KA engine).....                              | EM-76     |
| Piston ring inspection (VG engine).....                              | EM-38     |

GI

MA

EM

LC

EF &amp; EC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

BF

HA

EL

IDX

## ALPHABETICAL INDEX

|  |           |
|--|-----------|
| Piston to bore clearance<br>(KA engine).....                       | EM-78     |
| Piston to bore clearance<br>(VG engine).....                       | EM-39     |
| Power door lock.....   | BF-15     |
| Power steering fluid .....   | MA-8      |
| Power steering fluid level .....                                   | MA-25     |
| Power steering fluid level .....                                   | ST-5      |
| Power steering gear (Model PB48S) .....                            | ST-25     |
| Power steering gear (Model PB59K) .....                            | ST-18     |
| Power steering hydraulic pressure .....                            | ST-7      |
| Power steering oil pressure switch<br>(KA engine).....             | EF&EC-155 |
| Power steering oil pressure switch<br>(VG engine) .....            | EF&EC-15  |
| Power steering oil pressure switch<br>inspection (KA engine) ..... | EF&EC-285 |
| Power steering oil pressure switch<br>inspection (VG engine) ..... | EF&EC-138 |
| Power steering oil pump.....                                       | ST-32     |
| Power steering system bleeding .....                               | ST-6      |
| Power supply routing.....  | EL-6      |
| Power transistor and ignition coil<br>(KA engine).....             | EF&EC-155 |
| Power transistor and ignition coil<br>(VG engine) .....            | EF&EC-14  |
| Power transistor inspection<br>(KA engine).....                    | EF&EC-281 |
| Power transistor inspection<br>(VG engine).....                    | EF&EC-134 |
| Power window.....  | BF-24     |
| Precautions (General) .....  | GI-2      |
| Pressure test (AT) RE4R01A .....                                   | AT-75     |
| Pressure test (AT) RL4R01A .....                                   | AT-89     |
| Propeller shaft.....   | PD-8      |
| Propeller shaft inspection .....                                   | MA-22     |
| Propeller shaft on vehicle service.....                            | PD-10     |
| Propeller shaft vibration .....                                    | PD-10     |

### R

|  |       |
|--|-------|
| Radiator (KA engine).....                          | LC-16 |
| Radiator (VG engine).....                          | LC-8  |
| Rear axle (disc brake type) .....                  | RA-9  |
| Rear axle (drum brake type) .....                  | RA-5  |
| Rear body.....                                     | BF-55 |
| Rear bumper.....                                   | BF-8  |
| Rear cover packing replacement<br>diff.....        | PD-15 |
| Rear disc brake .....                              | BR-21 |
| Rear drum brake .....                              | BR-18 |
| Rear side window .....                             | BF-49 |
| Rear suspension (5-link type).....                 | RA-17 |
| Rear suspension .....                              | RA-13 |
| Rear wheel anti-lock brake system<br>(R-ABS) ..... | BR-28 |
| Rear window defogger .....                         | EL-53 |

|   |           |
|---|-----------|
| Refrigerant connection precaution.....      | HA-4      |
| Refrigerant general precaution .....        | HA-3      |
| Refrigerant lines.....                      | HA-18     |
| Refrigeration cycle .....                   | HA-10     |
| Release bearing (clutch) .....              | CL-10     |
| Resistor inspection (KA engine) .....       | EF&EC-285 |
| Reverse clutch RE4R01A and<br>RL4R01A ..... | AT-167    |
| Reverse gear (MT) FS5R30A .....             | MT-34     |
| Reverse gear (MT) FS5W71C .....             | MT-11     |
| Reverse idler shaft (MT) FS5R30A .....      | MT-34     |
| Reverse idler shaft (MT) FS5W71C .....      | MT-11     |
| Revolution sensor (AT).....                 | AT-71     |
| Road wheel size .....                       | GI-21     |
| Rotor disc (front).....                     | FA-25     |

### S

|  |              |
|--|--------------|
| SAE J1930 terminology list.....                                      | GI-27        |
| Seat (front) .....   | BF-41        |
| Seat (rear).....   | BF-43        |
| Self-diagnostic results (KA engine) .....                            | EF&EC-181    |
| Self-diagnostic results (VG engine).....                             | EF&EC-37     |
| Shift control (MT) FS5R30A .....                                     | MT-36        |
| Shift control (MT) FS5W71C .....                                     | MT-13        |
| Shift control (TF).....  | TF-11        |
| Shift control (TF).....  | TF-23        |
| Shift fork (MT) FS5R30A .....  | MT-36        |
| Shift fork (MT) FS5W71C .....  | MT-13        |
| Shift lock system.....   | AT-95        |
| Shift schedule RE4R01A .....   | AT-28        |
| Shift schedule RL4R01A .....   | AT-81        |
| Shift solenoid valve (AT) .....                                      | AT-72        |
| Shock absorber (adjustable, front) .....                             | FA-47        |
| Shock absorber (front).....  | FA-38        |
| Shock absorber (rear).....   | RA-14        |
| Side bearing preload<br>(front final drive 4WD) (R180A) .....        | PD-25        |
| Side bearing preload<br>(front final drive 4WD) (R200A) .....        | PD-43        |
| Side bearing preload diff. (H190A) .....                             | PD-62        |
| SMJ (super multiple junction).....                                   | Foldout page |
| Soft/Hard closed throttle position<br>(CTP) switch (VG engine) ..... | EF&EC-12     |
| Soft/Hard closed throttle position<br>(CTP) switch (KA engine).....  | EF&EC-153    |
| Spark plug replacement (KA24E).....                                  | MA-18        |
| Spark plug replacement (VG30E) .....                                 | MA-14        |
| Stabilizer bar (front) .....   | FA-41        |
| Stabilizer bar (rear) .....  | RA-19        |
| Stall test (AT) .....  | AT-73        |
| Standardized relay.....  | EL-4         |
| Starter.....   | EL-14        |
| Starting system .....  | EL-12        |
| Steering gear and linkage<br>inspection .....                        | MA-25        |
| Steering gear oil level.....   | MA-25        |



# ALPHABETICAL INDEX

|                                    |        |
|------------------------------------|--------|
| Steering linkage.....              | ST-35  |
| Steering wheel and column .....    | ST-8   |
| Steering wheel play.....           | ST-4   |
| Steering wheel turning force ..... | ST-6   |
| Stop lamp .....                    | EL-28  |
| Striking rod (MT) FS5R30A .....    | MT-36  |
| Striking rod (MT) FS5W71C .....    | MT-13  |
| Sun roof.....                      | BF-51  |
| Sunload sensor.....                | HA-101 |
| Synchronizer (MT) FS5R30A.....     | MT-34  |
| Synchronizer (MT) FS5W71C.....     | MT-11  |

T

|   |           |
|---|-----------|
| Tail lamp.....  | EL-28     |
| Temperature control cable and linkage adjustment.....               | HA-54     |
| Tension rod (front).....  | FA-43     |
| Thermal protector.....  | HA-53     |
| Thermo control amp.....   | HA-53     |
| Thermostat (KA engine).....   | LC-15     |
| Thermostat (VG engine).....   | LC-8      |
| Three way catalyst precautions.....                                 | GI-4      |
| Throttle position sensor (TPS) (KA engine).....                     | EF&EC-153 |
| Throttle position sensor (TPS) (VG engine).....                     | EF&EC-12  |
| Throttle position sensor inspection and adjustment (KA engine)..... | EF&EC-282 |
| Throttle position sensor inspection and adjustment (VG engine)..... | EF&EC-135 |
| Tie-rod.....  | ST-36     |
| Tie-rod ball joints.....  | ST-37     |
| Tightening torque of standard bolts.....                            | GI-26     |
| Timing belt (VG engine).....  | EM-12     |
| Timing chain (KA engine).....                                       | EM-55     |
| Tire rotation .....   | MA-23     |
| Tire size .....   | GI-21     |
| Tooth contact (front final drive 4WD) (R180A).....                  | PD-30     |
| Tooth contact (front final drive 4WD) (R200A).....                  | PD-49     |
| Tooth contact diff. (H190A).....                                    | PD-67     |
| Tooth contact diff. (H233B).....                                    | PD-90     |
| Torque converter clutch solenoid valve .....                        | AT-72     |
| Torque converter installation.....                                  | AT-113    |
| Torsion bar spring.....   | FA-38     |
| Tow truck towing .....  | GI-24     |
| Towing points .....   | GI-25     |
| Transfer case .....   | TF-9      |
| Transfer gear oil.....  | MA-8      |
| Transfer oil replacement.....                                       | MA-21     |
| Transfer overhaul .....   | TF-9      |
| Transfer removal and installation.....                              | TF-7      |
| Transfer serial number .....  | GI-19     |
| Transmission case (MT) FS5R30A .....                                | MT-33     |

|                                      |       |
|--------------------------------------|-------|
| Transmission case (MT) FS5W71C ..... | MT-10 |
| Tread-FR&RR (Dimensions).....        | GI-20 |
| Trim - door .....                    | BF-29 |
| Trim - roof.....                     | BF-30 |
| Trim - side and floor.....           | BF-29 |
| Turn signal lamp.....                | EL-31 |

U

|                               |       |
|-------------------------------|-------|
| Upper link (front susp.)..... | FA-42 |
|-------------------------------|-------|

V

|   |           |
|---|-----------|
| Vacuum hose (brake system).....             | BR-11     |
| Vacuum hose drawing (ECCS) (VG engine)..... | EF&EC-7   |
| Valve clearance (VG engine).....            | EM-47     |
| Valve guide inspection (KA engine).....     | EM-66     |
| Valve guide inspection (VG engine).....     | EM-26     |
| Valve seat inspection (KA engine).....      | EM-67     |
| Valve seat inspection (VG engine).....      | EM-27     |
| Valve spring inspection (KA engine).....    | EM-68     |
| Valve spring inspection (VG engine).....    | EM-28     |
| Vapor lines inspection (KA24E).....         | MA-19     |
| Vapor lines inspection (VG30E).....         | MA-14     |
| Vehicle identification number .....         | GI-17     |
| Vehicle speed sensor (VSS) (KA engine)..... | EF&EC-155 |
| Vehicle speed sensor (VSS) (VG engine)..... | EF&EC-15  |
| Ventilator door control rod adjustment..... | HA-53     |
| Viscosity number (SAE) .....                | MA-9      |

W

|  |        |
|--|--------|
| Warning chime .....                    | EL-46  |
| Warning lamps .....                    | EL-44  |
| Washer, front.....                     | EL-48  |
| Washer, rear .....                     | EL-49  |
| Water cock control rod adjustment..... | HA-54  |
| Water pump (KA engine).....            | LC-14  |
| Water pump (VG engine).....            | LC-7   |
| Water temperature gauge .....          | EL-40  |
| Water temperature sensor.....          | HA-102 |
| Weatherstrip.....                      | BF-35  |
| Wheel alignment (front).....           | FA-9   |
| Wheel balance .....                    | MA-23  |
| Wheel bearing (front axle) .....       | FA-7   |
| Wheel bearing (rear).....              | RA-4   |
| Wheel hub (front).....                 | FA-25  |
| Wheel sensors (ABS).....               | BR-30  |
| Wheelbase (Dimensions) .....           | GI-20  |
| Width (Dimensions) .....               | GI-20  |

## ALPHABETICAL INDEX

---

Windshield and windows.....BF-46  
Wiper and washer.....EL-48  
Wiper, front.....EL-48

Wiper, rear .....EL-49  
Withdrawal lever (clutch) .....CL-10